

HY Green Energy Inverter Cleaning Procedure

All the HYGE Inverters come with an anti-dust kit, however, we do recommend monthly maintenance as inverter damage due to dust damage can lead to voiding of your warranty.

Please see below for the guide on how to maintain the anti-dust kit.


CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT

Overview


Every inverter is already installed with anti-dusk kit from factory. This kit keeps dusk from your inverter and increases product reliability in harsh environment.

Clearance and Maintenance

Step 1: Please remove the screws on the sides of the inverter.

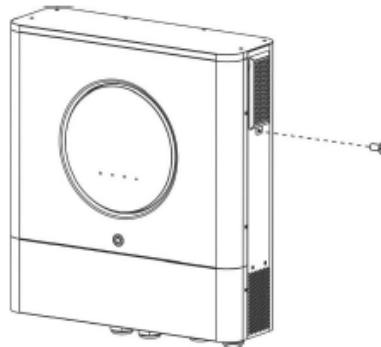

Step 2: Then, dustproof case can be removed and take out air filter foam as shown in below chart.

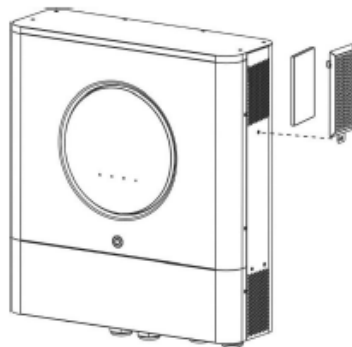

Step 3: Clean air filter foam and dustproof case. After clearance, re-assemble the dust-kit back to the inverter.

NOTICE: The anti-dust kit should be cleaned from dust every one month.