

## Inverter System Restart Procedure

### Shut down Procedure

1. If applicable switch off both PV isolator switches at Solar Combiner box.
2. Switch off “*To Inverter*” and “*From Inverter*” at the AC board Combiner Box.
3. Switch off inverter by pressing the power button (or flipping the switch at bottom of inverter for 5.5KW model).
4. Switch off batteries by pressing the silver button and flipping the blue switch to “off”. All lights on the battery should be off.
5. The inverter should shut down completely and the LCD screen should be off.

### Startup Procedure

1. Switch batteries on by pressing the silver button and flipping the blue switch to “on”. Batteries will be on when the green lights showing battery capacity is visible and the green light will be on under “*RUN*”.
2. Switch on inverter by pressing the power button.
3. If applicable switch on both PV isolator switches at Solar Combiner box.
4. Switch on “*To Inverter*” and “*From Inverter*” at the AC board.
5. Inverter LCD should be on.